


# Promo Plus Wall Putty

Promo+ Wall Putty is a white cement based product for covering unevenness and pinholes in plastered surfaces and providing a white, smooth and dry surface for painting. It is suitable for both interior and exterior application.



### **Product Benefits**

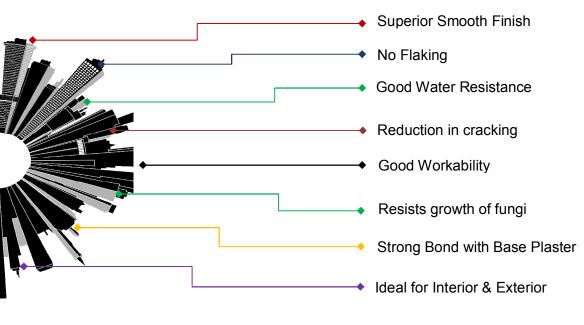



### **Product Features**

#### **AVAILABLE PACKS**



1 KG 40 KG

# SHADE RANGE





#### **COVERAGE**

On rough masonry surface by putty knife

2 COATS- 10 sq.ft/Kg\*


\*However it will depend on nature of substrate and thickness

#### DRYING TIME TO RECOAT



5-7 HOURS

RECOMMENDED SURFACES It is suitable for use on all types of external cement plasters/interior walls, asbestos sheets, concrete, and so on.

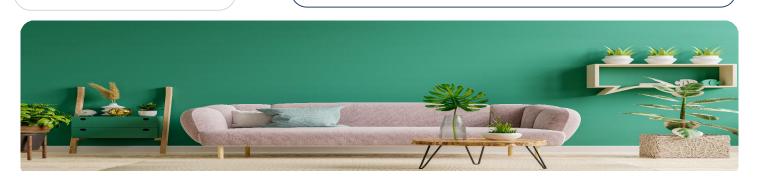



## How to Apply

SURFACE PREPARATION

**MIXING OF "PROMO PLUS WALL PUTTY"** 

PRE-WETTING OF THE SUBSTRATE

**APPLICATION** 

The substrate should be dust-free, grease-free, and devoid of loose objects. Using a suitable amount of clean water, moisten the wall before applying the Promo Plus wall Putty

To produce a paste, slowly combine Promo Plus Wall Putty with 35-40% clean water. Mix for another 10-15 minutes, or until a homogeneous paste is produced. For proper mixer ideally use a mechanical mixer. Prepare just an amount that may be consumed within 1-2 hours after being mixed with water.

It is very important that the surface be properly wetted before applying the " Promo Plus Wall Putty." During application, the surface should be moist. This results in increased bonding strength, ease of workability, and surface coverage.

- 1.After fully mixing "Promo Plus Wall Putty," use a putty blade to apply the first layer uniformly from the bottom to the top of the wet wall surface. This would ensure less waste and a perfect finish.
- 2.After the initial coat of putty has dried, carefully wipe the surface with a damp sponge or very lightly with the putty blade to remove any loose particles.
- 3. Allow at least 3 hours for the surface to dry before applying the second coat of putty. After the second layer has dried, erase any sort of markings with a damp sponge or wipe the surface very gently with the putty blade.
- 4. Allow the surface to cure, ideally overnight / 10-12 hours.
- 5. The overall thickness of the coatings should be no more than 1.5 mm.

#### TECHNICAL DETAILS

- 1.Drying time: Surface dry time 30
- 2.Recoating Time: 5-7 hrs
- 3.Flash: NA
- 4. Thining With 35-40% clean
- water
- 5. Stability of thinned paint: To be used within 1-2 Hrs
- \*\* The overall thickness of the coatings should be no more than 1.5 mm

#### PRECAUTION & SAFETY FEATURES

- ✓ Keep out of reach of children
- ✓ Store in dry place
- ✓ If ingested, it might be dangerous. In the event of ingestion, seek medical treatment right away.
- Apply by using putty knife
- ✓ Wear eye protection when applying. If you come into touch with your eyes, immediately rinse them with lots of water and seek medical attention..
- When not in use, the bag must be securely closed.
- ✓ To minimise dust inhalation, it is advised that you use an appropriate nose pad when sanding and surface preparation.
- ✓ Do not pour leftover paint down the drain or in water courses.
- ✓ No added Lead, Mercury or Chromium compounds
- ✓ Individuals who are allergic to cement products should exercise caution before using them.
- Use before 6 month for better results.

